




Model No.HM004G CORDLESS BREAKER

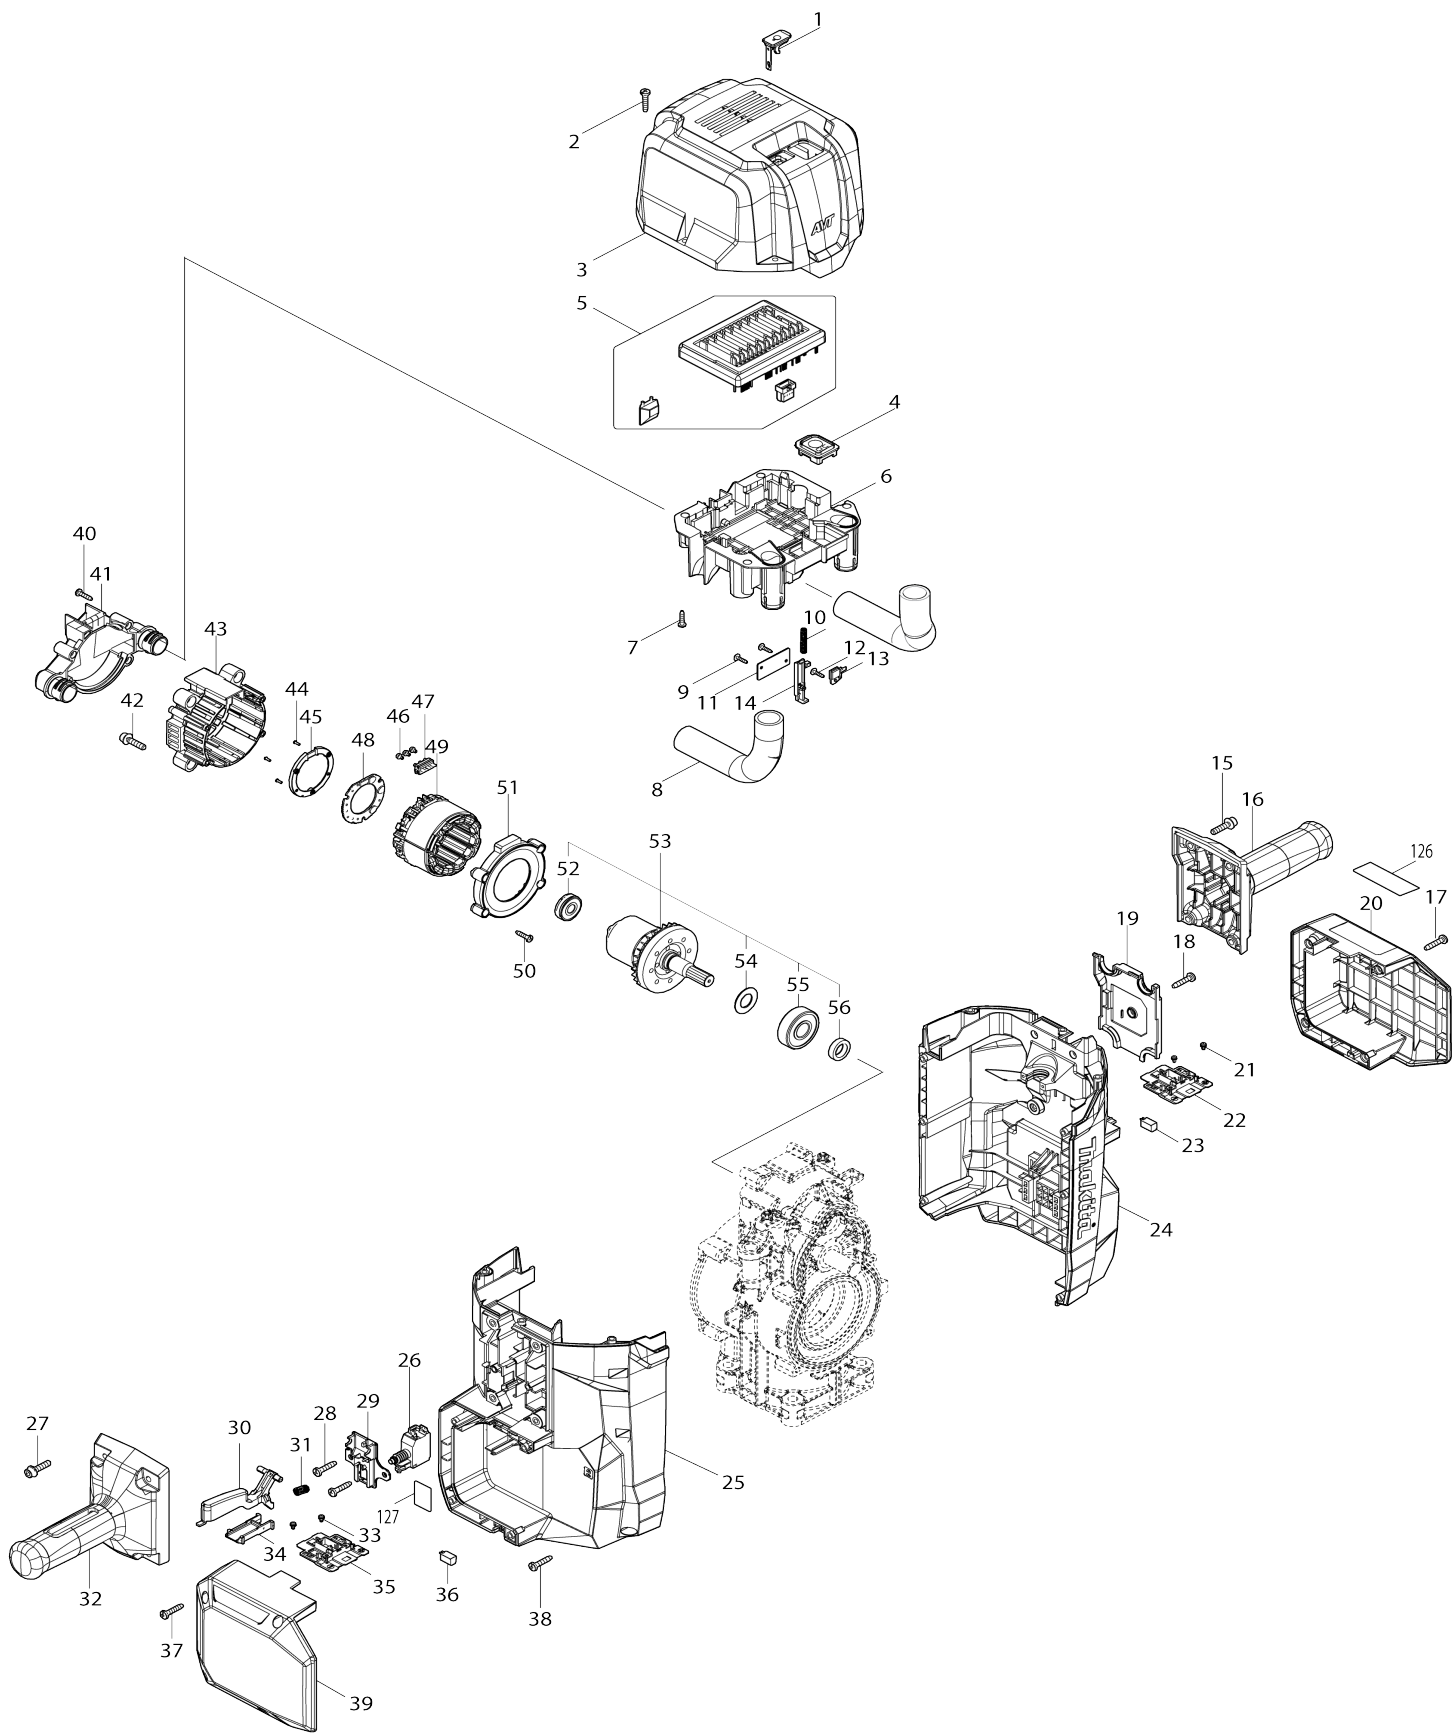

Model No.HM004G CORDLESS BREAKER

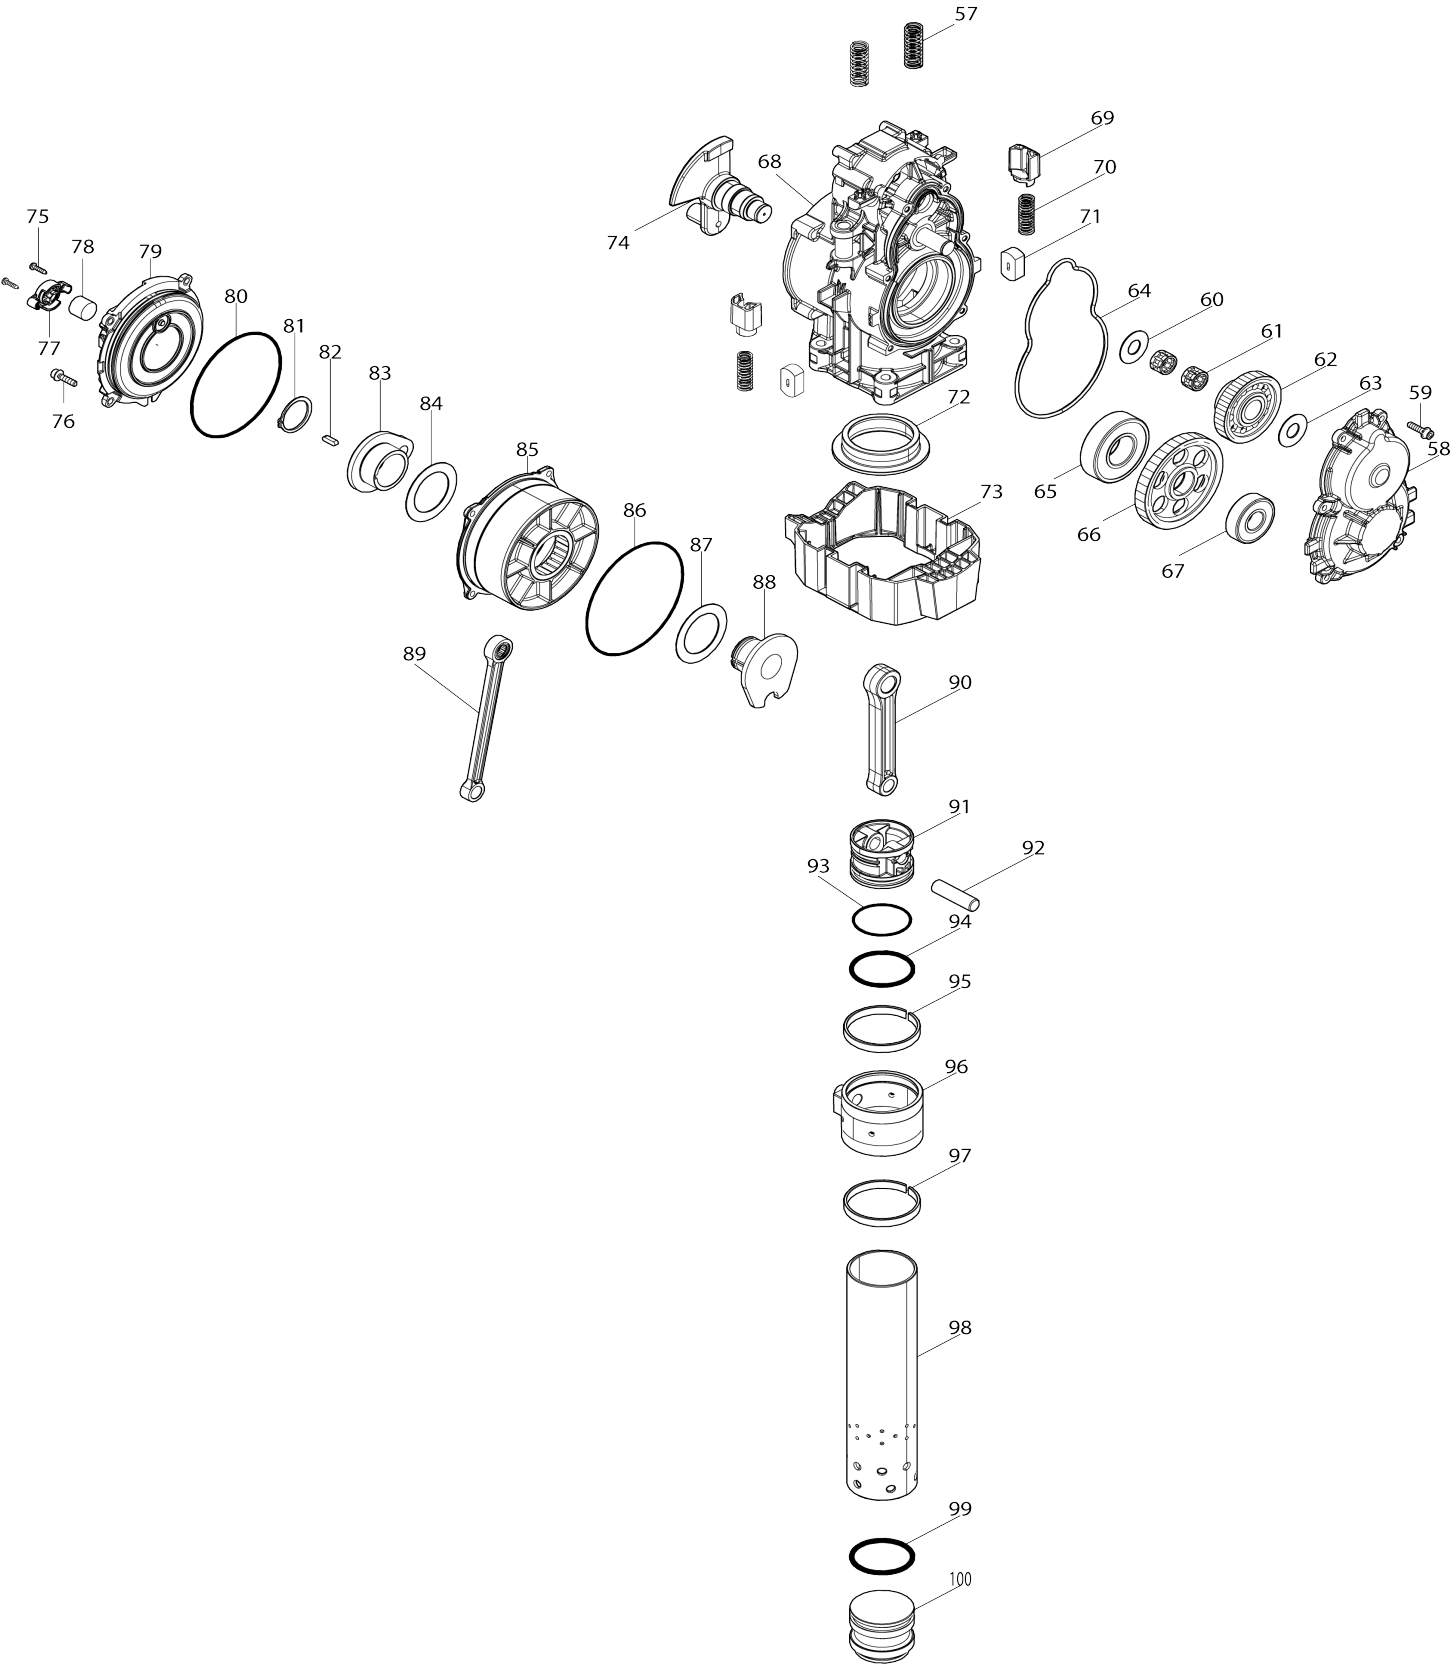

Model No.HM004G CORDLESS BREAKER

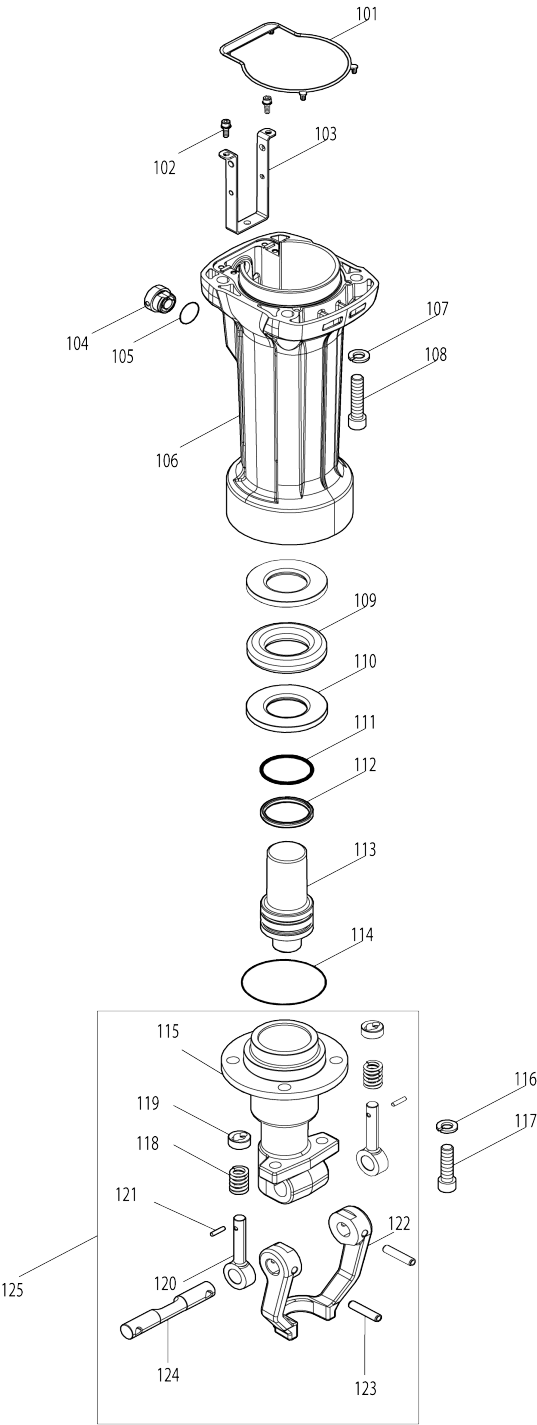

Model No.HM004G CORDLESS BREAKER

Artike l-Nr.	Teile-Nr.	Beschreibung	Austa uschb arkeit	Anzah l	Neu/A lt	Notiz 1	Notiz 2
001	140G30-2	Kappe komplett		1			
C10	213218-6	O-Ring 16		1			
002	266041-8	Bindekopf-Blechschraube 5X25		6			
003	413W53-2	HEAD COVER		1			
004	620M94-3	SWITCH CIRCUIT COMPLETE		1			
005	620M83-8	CONTROLLER		1			
006	413W57-4	CONTROLLER COVER		1			
007	265995-6	Bindekopf-Blechschraube 4X18		4			
008	245070-4	HOSE 23		2			
009	263046-9	Blechschraube 3X14		2			
010	232833-7	COMPRESSION SPRING 5		1			
011	347B99-9	PLATE		1			
012	263046-9	Blechschraube 3X14		1			
013	620M85-4	SENSOR CIRCUIT		1			
014	141U69-2	LEVER COMPLETE		1			
015	266923-4	Innensechskantkopfschraube M 6X25 GM		4			
016	413W59-0	HANDLE B		1			
017	266041-8	Bindekopf-Blechschraube 5X25		4			
018	266041-8	Bindekopf-Blechschraube 5X25		1			
019	413W61-3	HANDLE BASE B COVER		1			
020	137097-7	BATTERY COVER B ASSEMBLY		1			
C10	263005-3	Gummistift 6		2			
021	652031-1	Flachkopfschraube M3X6		2			
022	632T07-4	Klemmeneinheit		1			
023	620H50-3	LED-Schaltung		1			
024	137098-5	HANDLE BASE B ASSEMBBLY		1			
C10	263005-3	Gummistift 6		2			
025	137094-3	HANDLE BASE A ASSEMBBLY		1			
C10	263005-3	Gummistift 6		2			
026	650738-3	Schalter C3JW-C-P		1			
027	266923-4	Innensechskantkopfschraube M 6X25 GM		4			
028	266041-8	Bindekopf-Blechschraube 5X25		2			
029	413W54-0	SWITCH COVER		1			
030	413W60-5	SWITCH LEVER		1			
031	232834-5	COMPRESSION SPRING 7		1			
032	413W58-2	HANDLE A		1			
033	652031-1	Flachkopfschraube M3X6		2			
034	455511-4	Schalterführung		1			
035	632T07-4	Klemmeneinheit		1			
036	620H50-3	LED-Schaltung		1			
037	266041-8	Bindekopf-Blechschraube 5X25		4			
038	266041-8	Bindekopf-Blechschraube 5X25		6			
039	137096-9	BATTERY COVER A ASSEMBLY		1			
C10	263005-3	Gummistift 6		2			
040	265995-6	Bindekopf-Blechschraube 4X18		4			
041	141U70-7	AIR DUCT COMPLETE		1			
042	266923-4	Innensechskantkopfschraube M		4			

		6X25 GM					
043	413W47-7	MOTOR HOUSING		1			
044	266490-9	Zylinderschraube 2X6		3			
045	687B69-9	Stopper		1			
046	652031-1	Flachkopfschraube M3X6		3			
047	638A80-8	LEAD UNIT		1			
048	620M84-6	CONTROLLER B		1			
049	629C64-9	STATOR		1			
050	265995-6	Bindekopf-Blechschrabe 4X18		4			
051	413W48-5	BAFFLE PLATE		1			
052	210232-3	Kugellager 6200DDW		1			
053	510600-3	ROTOR ASSY		1			
053		INC. 52,54-56					
054	267487-1	Unterlegscheibe 17		1			
055	211152-4	Kugellager 6303LLU		1			
056	332129-7	Schraubendichtung		1			
057	232832-9	COMPRESSION SPRING 15		2			
058	312E79-2	GEAR COVER		1			
059	266923-4	Innensechskantkopfschraube M 6X25 GM		6			
060	267290-0	Unterlegscheibe 18		1			
061	212099-5	Nadelkäfig 1816		2			
062	227B17-2	GEAR COMPLETE 21-52		1			
063	267290-0	Unterlegscheibe 18		1			
064	422B04-8	SEAL RING		1			
065	211500-7	Kugellager 6307LLU		1			
066	227B16-4	HELICAL GEAR 52_A		1			
067	210234-9	Kugellager 2216LLB		1			
068	141U68-4	CRANK HOUSING COMPLETE		1			
069	413W49-3	SPRING HOLDER		2			
070	232831-1	COMPRESSION SPRING 12		2			
071	422B05-6	DAMPER		2			
072	332131-0	Abstandshalter		1			
073	413W50-8	CENTER COVER		1			
074	327C96-7	CRANK SHAFT		1			
075	265995-6	Bindekopf-Blechschrabe 4X18		2			
076	266923-4	Innensechskantkopfschraube M 6X25 GM		4			
077	413W46-9	FILTER COVER		1			
078	443127-7	Filter		1			
079	413W45-1	CRANK CAP		1			
080	213810-8	O-Ring 124		1			
081	961156-3	Haltering (EXT) S-40		1			
082	254220-0	Schlüssel 5		1			
083	142921-1	Kurbel komplett		1			
084	267486-3	Unterlegscheibe 50		1			
085	142952-0	Kurbelkasten komplett		1			
086	213902-3	O-Ring 135		1			
087	267486-3	Unterlegscheibe 50		1			
088	310619-0	Gegenwelle		1			
089	142922-9	Pleuelstange kpl.		1			
090	455490-6	Pleuelstange		1			

091	455509-1	Kolben		1			
092	268328-4	Stift 15C		1			
093	213662-7	O-Ring 55		1			
094	213799-0	O-Ring 56		1			
095	455492-2	Abstandshalter 72		1			
096	142920-3	BALLANCER COMPLETE		1	*		
096-1	123361-2	Konterhülse kpl.	X	1			
096-1		INC. 95,97					
097	455492-2	Abstandshalter 72		1			
098	332130-2	Zylinderbuchse 66		1			
099	213799-0	O-Ring 56		1			
100	326470-8	Schläger		1			
101	424666-6	Dichtungsring A		1			
102	266071-9	Innensechskantkopfschraube M 5X16		2			
103	346840-5	Platte		1			
104	450347-6	Kappe		1			
105	213953-6	O-Ring 24		1			
106	312E80-7	BARREL		1			
107	942301-9	Federring 12		4			
108	922677-0	Innensechskantkopfschraube M 12X55		4			
109	262174-7	Gummiring 47		1			
110	332127-1	Unterlegscheibe 42		2			
111	213798-2	O-Ring 47		1			
112	213797-4	X-Ring 47		1			
113	326469-3	Schlagbolzen		1			
114	213757-6	O-Ring 80		1			
115	310616-6	Werkzeugaufnahme 29		1			
116	942301-9	Federring 12		4			
117	265989-1	Innensechskantkopfschraube M 12X45		4			
118	233083-7	Druckfeder 12		2			
119	322560-5	Haltering		2			
120	322477-2	Werkzeughalterstange		2			
121	256219-1	Stift 4		2			
122	324236-0	Werkzeughalter		1			
123	951272-9	Federstift 8-40		2	*		
123-1	258071-3	SPRING PIN 8-40	O	2			
124	324238-6	Werkzeughalterschaft		1			
125	135669-2	Werkzeugaufnahme Baugruppe		1			
125		INC. 115,118-124					
126	8145E4-9	HM004G NAME PLATE		1			
127	8145E6-5	HM004G SERIAL NO.LABEL		1			
A01	783203-8	Sechskantschlüssel 5		1			
A02	B-10372	Spitzmeissel B 1 1/8" 400mm		1			
A03	198900-7	Funk-adapter		1	*		
A03-1	198900-7	Funk-adapter	O	1	*		
A03-2	198900-7	Funk-adapter	<	1			
B01	1914A5-3	HAMMER SERVICE KIT		1			
C10	1914C5-7	GREASE SET		5			
B01		INC. 94,99,111,112					

E01	819R43-7	Hinweisschild geräusch 105DB		1			
F05	JM00000674	HAMMER CARRIER		1			

Bitte geben Sie bei Ihrer Bestellung die Teile-Nr. an.

Druckdatum 30/12/2024